



KARL'S EVENT RENTAL


7000 South 10th Street
Oak Creek, WI 53154
(414) 831-7000
www.karls.com

Description and Features

The projection screen we offer at Karl's Event Rental can be used with a wide variety of projector types. The screen is a 70-inch by 70-inch square, and is on a tripod. The screen comes folded up when rented and it is very simple to set it up.

Parts of the Screen

1. Slat
2. Saddle
3. Pull Bail
4. Hanger Hook
5. Picture Surface
6. Extension Tube
7. Red Locking Knob
8. Bottom Tube
9. Handle
10. Roller
11. Tripod
12. Leg Bracket
13. Toe Release Plate and Leg Lock
14. Leg Shoes
15. Fabric Tension Lock
16. End Cap
17. Screen Case
18. Red Locking Knobs
19. Slat Caps

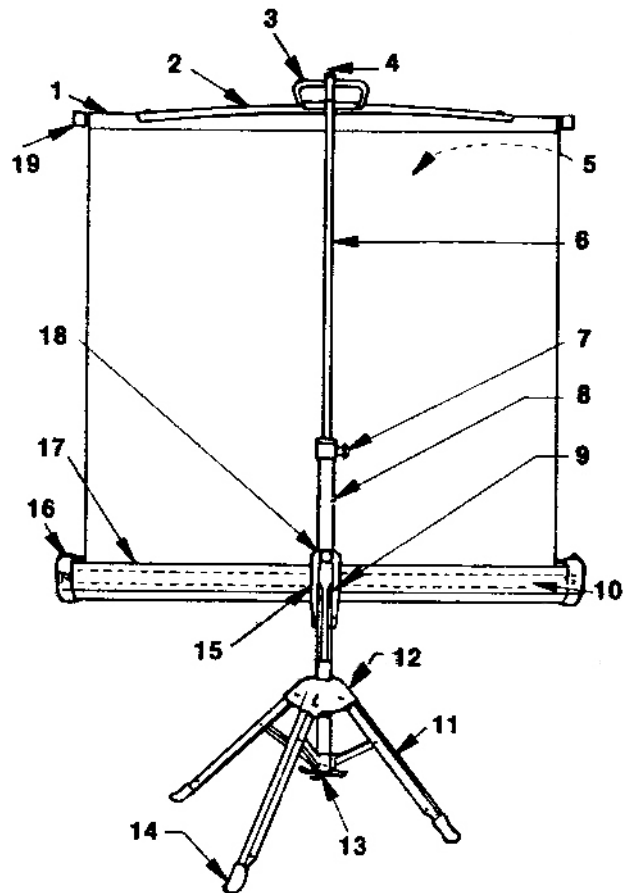

Setting Up Your Screen

1. Hold the screen vertically, with the tripod just above the floor. Using your toe, press straight down on the toe release plate and the tripod legs will glide open.
2. Pull out Red Locking Knob at the bottom of the tube.
3. Raise the extension tube to the first position, and then swing case to horizontal position.
4. Raise the screen surface and place the pull bail over hanger. If a Keystone Eliminator is being used, simply grasp the knurled tip which protrudes slightly



- above the hanger. Now pull it straight up, then lay it in a horizontal position over the hanger and place the pull bail on it.
5. Release the Red Locking Knob and Fabric tension lock lever on the handle.
 6. While holding the extension tube with one hand and releasing the Red Locking Knob with the other, raise the extension tube to the desired position.
 7. The case position may be changed by pulling out on the Red Locking Knob located on the handle.
 8. For rectangular picture area on screens with square surfaces, move the case to the desired position and lock by pressing down on the fabric tension lock lever.
 9. On models with Silver Lenticular surface, press down on handle until surface is taut. Lock it by pressing down on the fabric tension lever.

Taking Down Your Screen

1. Return the screen case to the original central position on center tube. On models with Silver Lenticular surface, first release the fabric Tension lock on the handle.
2. Hold the extension tube firmly, and pull out the top Red Locking Knob and lower extension tube to bottom position.
3. Unhook the screen and pull bail and complete re-rolling fabric into case.
4. If Keystone Eliminator has been used, simply raise it to a perpendicular position and push it back into the extension tube.
5. Swing the case to the vertical position, note that the fabric locks in.
6. Set tab on hanger in opening of case and cap. As the extension tube locks, the case is locked as well.
7. Place the tip of your middle finger of your right hand in the depression beneath the leg bracket. Lift leg bracket sharply, at the same time while applying a slight lift to the entire unit with the left hand. Note that legs are closed and locked, hanger, extension tube, and case are locked. The surface should be locked for easy transportation and storage.

